Gantner
UNLOCK

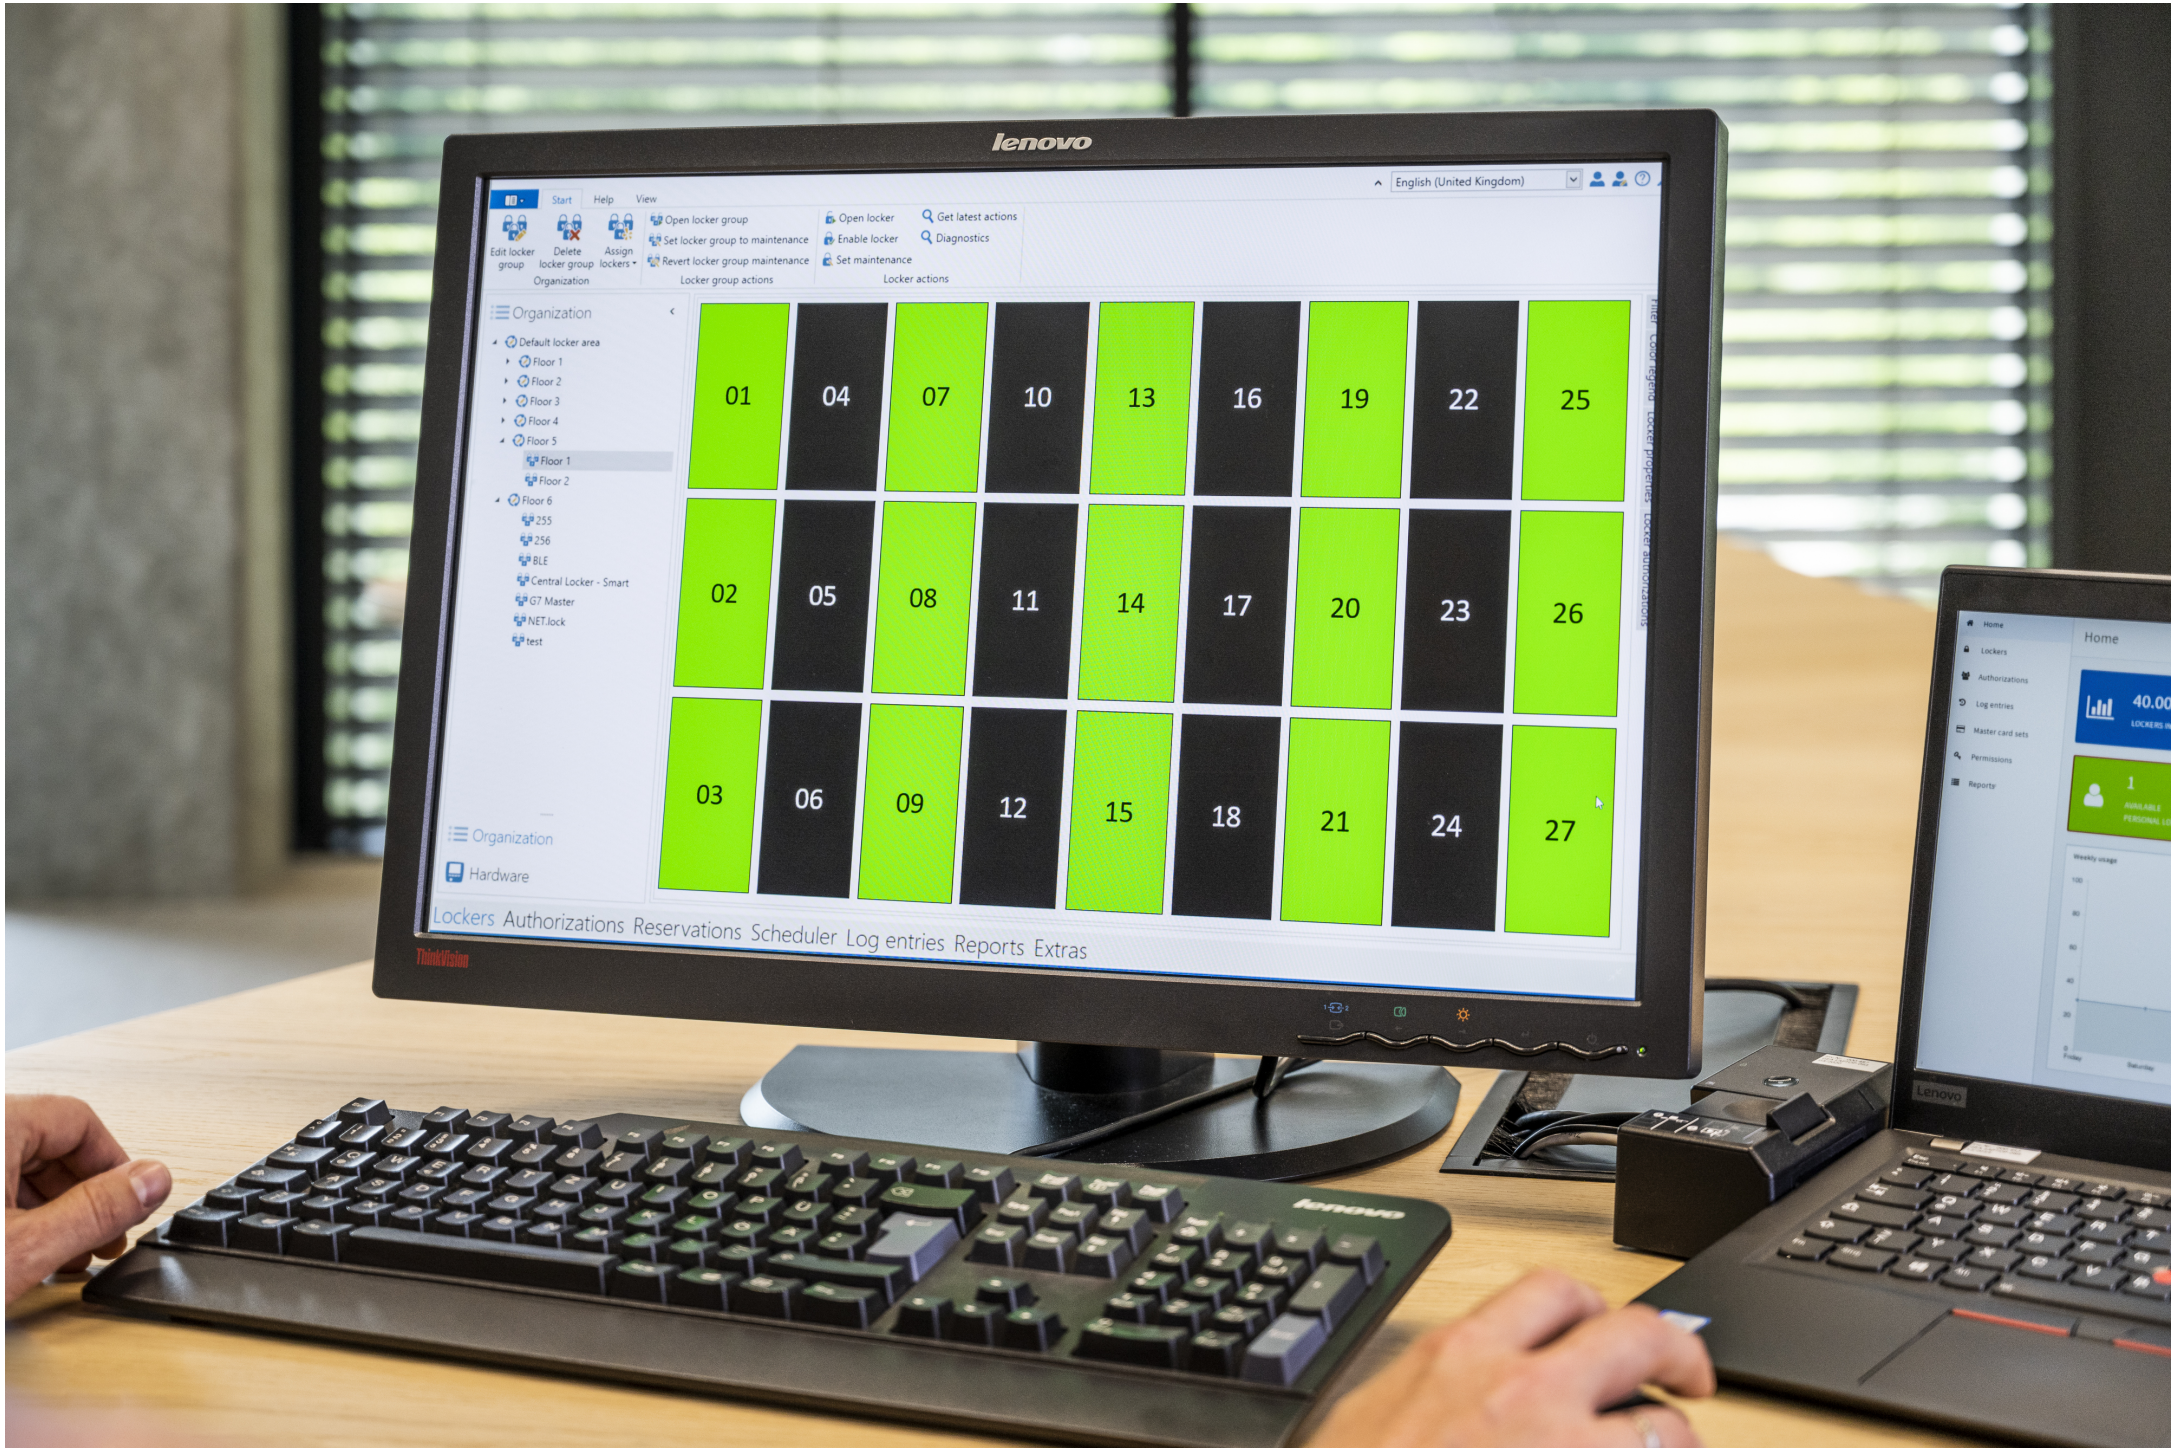
lenovo
Start
Help
View
English (United Kingdom)
Edit locker group
Delete locker group
Assign lockers
Organization
Open locker group
Set locker group to maintenance
Revert locker group maintenance
Locker group actions
Open locker
Enable locker
Set maintenance
Get latest actions
Diagnostics
Locker actions
Organization
Default locker area
Floor 1
Floor 2
Floor 3
Floor 4
Floor 5
Floor 1
Floor 2
Floor 6
255
256
BLE
Central Locker - Smart
G7 Master
NET.lock
test
01 04 07 10 13 16 19 22 25
02 05 08 11 14 17 20 23 26
03 06 09 12 15 18 21 24 27
Organization
Hardware
Lockers Authorizations Reservations Scheduler Log entries Reports Extras
ThinkVision
Home
Lockers
Authorizations
Log entries
Master card sets
Permissions
Reports
Home
40.00
1
Lenovo

Gantner
My lockers
3
UNLOCK

Gantner

L.05.067
L.05.069
L.05.071
L.05.073
L.05.068
L.05.070
L.05.072
L.05.074